




Dual Capacitor Wiring Diagram

HOMA single phase A Series and GRP pumps may require that both start and run capacitors be installed with a potential relay in the start winding. Use the diagrams below to identify the correct method of wiring.

- Wire **Z2** is the connection to the start winding.
- Wire **U2** is the connection to the run winding.
- Wire **U1** is the common connection for both windings.

4 Conductor Cable: If your pump has a 4 conductor cable, use this diagram.

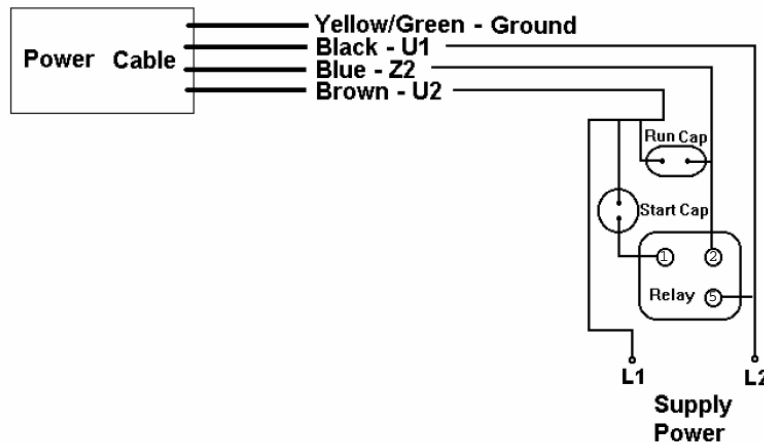

7 Conductor cable: If your pump has a 7 conductor cable, use this diagram.

