



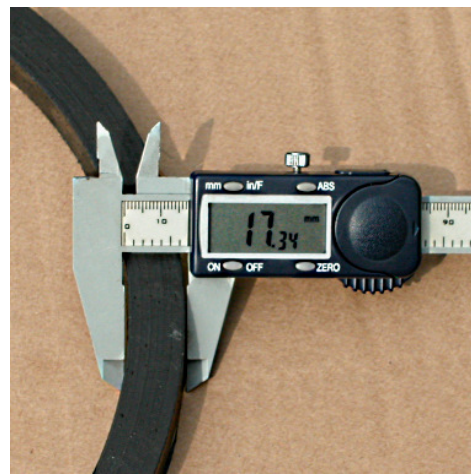

## Procedures

### Installing 8" and Larger Profile Seals

When installing a profile seal, one side of the seal is wider than the other. This **WIDER SIDE** goes in **FIRST**. Measure both sides first to be certain which is larger.

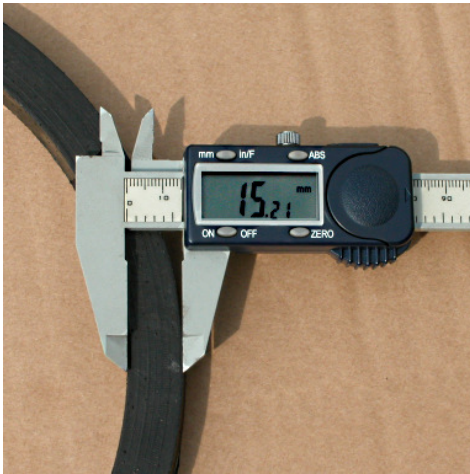

Apply a thin coat of dishwashing detergent to the back (the side touching the claw) and sides of the profile seal if desired and gently tap the seal into place using a **SOFT FACED** hammer.



If the seal goes in easily, it is most likely backwards. When installed properly, the seal forms a "dovetail" with the claw.

**REMEMBER:** the larger diameter always goes to the inside.